

ASUS A7V8X-MX user manual update

This is an information update for the A7V8X-MX user manual that came with your motherboard package.

Page 1-16

3. Clear RTC RAM (CLRTC1)

This jumper clears the Real Time Clock (RTC) RAM of date, time and system setup parameters in CMOS. The RAM data in CMOS is powered by the onboard button cell battery.

To erase the RTC RAM:

1. Turn OFF the computer and unplug the power cord.
2. Remove the battery.
3. Move the jumper caps from **[2-3]** to **[1-2]** momentarily. Replace the jumper cap to the original position, **[2-3]**.
4. Re-install the battery.
5. Plug the power cord and turn ON the computer.
6. Hold down the key during the boot process and enter BIOS setup to re-enter data.

