



# Motherboard

---

## OC Panel Firmware Update Guide

[繁體中文]

[简体中文]


[日本語]

D135 / First Edition  
August 2013  
Copyright © ASUSTeK Computer Inc.  
All Rights Reserved

## Updating the OC Panel firmware



- Download the OC Panel zipped file, which contains the firmware and executable files, from ASUS Support site at <http://support.asus.com>.
- Before you proceed, disable the USB XHCI function from **Advanced > USB Configuration > Intel xHCI Mode** in the BIOS Setup program.
- OC Panel firmware update app is supported under Windows® 7 / 8 (32bit/64bit).

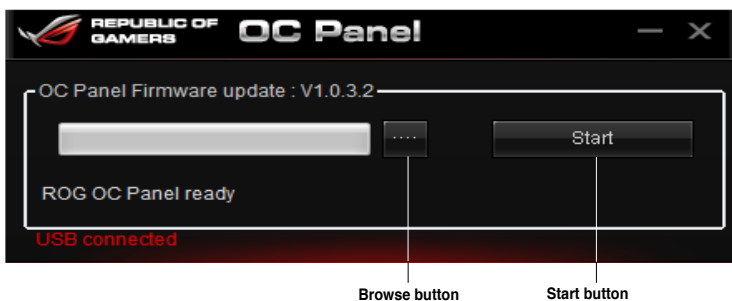

### To update the OC Panel firmware:

1. Run the ROG OC Panel executable file to launch the OC Panel firmware update app.
2. Click the Browse button to locate the latest firmware file.
3. Select the firmware file.
4. Click **Start** to begin the update process. Wait until the update process is finished.
5. Disconnect the OC Panel from the motherboard, and connect it again.




For more details on OC Panel, refer to your motherboard's user manual.

## 更新 OC Panel 韌體



- 從華碩支援網站 <http://support.asus.com> 下載 OC Panel 壓縮檔案，包含韌體和執行檔案。
- 作業前請從 BIOS 設定程式的 Advanced > USB Configuration > Intel xHCI Mode 路徑，關閉 USB XHCI 功能。
- OC Panel 韌體更新程式支援 Windows® 7 / 8 (32bit/64bit)。

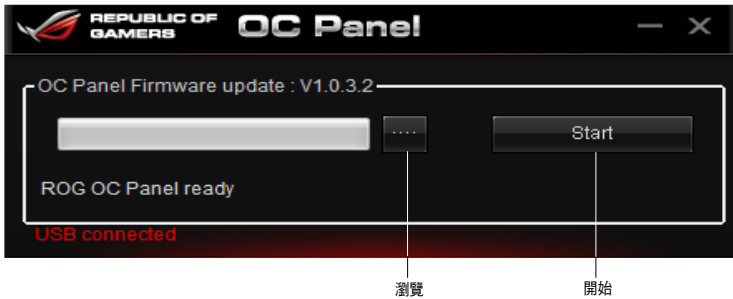

### 更新 OC Panel 韌體：

1. 運作 ROG OC Panel 執行檔案，打開 OC Panel 韌體更新程式。
2. 點選瀏覽【Browse】按鈕，找到最新的韌體檔案。
3. 選擇韌體檔案。
4. 點選開始【Start】按鈕開始更新並等待更新結束。
5. 從主機板斷開 OC Panel 並重新連接。



更多詳細資訊，請參考主機板的使用手冊。

## 更新 OC Panel 固件



- 从华硕支持网站 <http://support.asus.com> 下载 OC Panel 压缩文件，包含固件和执行文件。
- 操作前请从 BIOS 设置程序的 Advanced > USB Configuration > Intel xHCI Mode 路径，关闭 USB XHCI 功能。
- OC Panel 固件更新程序支持 Windows® 7 / 8 (32bit/64bit)。



### 更新 OC Panel 固件：

1. 运行 ROG OC Panel 执行文件，打开 OC Panel 固件更新程序。
2. 点击浏览【Browse】按钮，找到最新的固件文件。
3. 选择固件文件。
4. 点击开始【Start】按钮开始更新并等待更新结束。
5. 从主板断开 OC Panel 并重新连接。



更多详细信息，请参考主板中的用户手册。

## OC Panelのファームウェアを更新する



- OC Panelのファームウェア更新用ファイルは、ASUS公式サイトからダウンロードすることができます。(http://support.asus.com)
- OC Panelのファームウェアを更新する際は、UEFI BIOS UtilityのIntel xHCI Modeを無効に設定する必要があります。設定方法は、UEFI BIOS Utilityを起動して「Advanced Mode」→「Advanced」→「USB Configuration」の順に進み、「Intel xHCI Mode」を「Disabled」に設定します。
- OC Panelのファームウェアを更新する際は、OC Panelに取り付けられているファンやセンサーなどをすべて取り外した状態で実施することをお勧めします。
- OC Panelファームウェア更新用プログラムは、Windows® 7 / 8 (32bit/64bit) のみご利用いただけます。



### 手順

1. マザーボードにOC Panelを接続します。
2. オフィシャルサイトからダウンロードしたOC Panelのファームウェア更新用ファイルを解凍し、実行ファイル(.exe)を起動します。
3. 参照ボタンをクリックし、OC Panelのファームウェアファイルを選択します。
4. スタートボタンをクリックし、ファームウェアの更新を開始します。
5. ファームウェアの更新完了後、マザーボードからOC Panelを一旦取り外し、再度取り付けます。



OC Panelについての詳細は、ASUS公式サイトおよび製品のユーザーマニュアルをご覧ください。